




Supplied with: Tower light, carry bag and AC charger.

Charging the floodlight



Charging Socket

Insert plug into socket and tighten hand wheel.

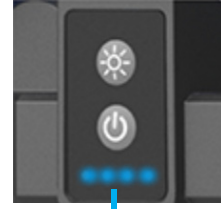

Battery Charging and Status Indicators



6 hours charging time.

The light can be used continuously when plugged into AC mains but it will only operate on medium mode.

Setting up the Tower Pro:



1. Slide button and lift leg to unlock each leg.



3. Unlock extending clamp and extend both poles to desired height and lock clamps.




4. Pull out the light heads from the top handle and rotate swivel to desired angle.




2. Unfold each leg out into position.



Setting up the Tower Pro Continued...


5. Press  button to turn the light ON/OFF again to change light modes:
 Low → Medium → High → Off
 5hrs 2.5hrs 1hrs

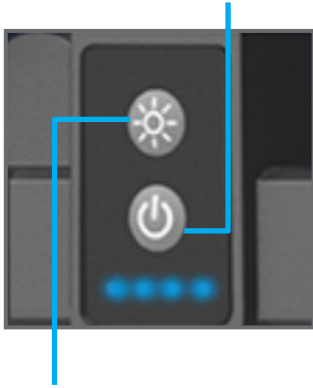

6. Use this button to change light beam from Cool white to Warm white



Reversible ground spikes:

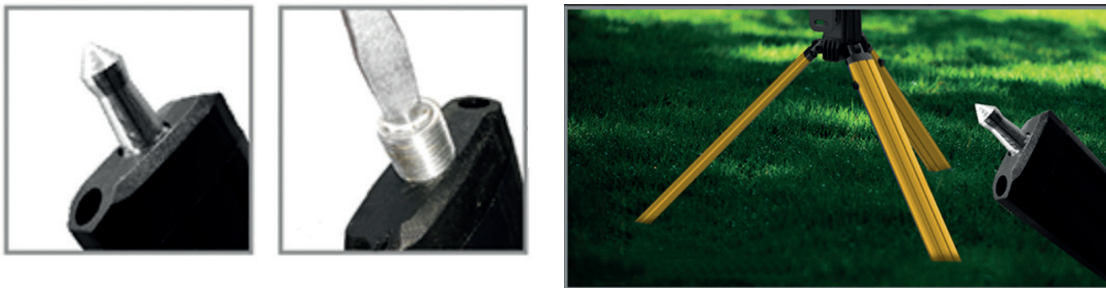

The Tower Pro comes with ground spikes, ideal for using on uneven ground. To release these unscrew using a screw driver, pull out the spike and rotate and push back into hole to secure into place.



NightSearcher Limited
 Unit 4 Applied House, Fitzherbert Spur, Farlington,
 Portsmouth, Hampshire, PO6 1TT, UK
 T: +44 (0)23 9238 9774
 E: sales@nightsearcher.co.uk

All NightSearcher products have a 3-year standard warranty on all manufacturing defects and 1-year warranty on all rechargeable batteries from the date of purchase.

For extended 5 year warranty please visit <https://nightsearcher.co.uk/en/extended-warranty.html> proof of purchase is required



Product weight	4.5kg
Product size (mm)	122x160x890mm
NS Part No.	NSTOWERPRO-2K