NightSearcher | TwinStar Connect User Manual



3 Optional adaptors available:

Accepts 18-21V batteries: Metabo, Festool and Hilti

(Battery not included)

NS Code: SPWORKSTAR-AD



Changing the battery adapters:

1) Check which of the 4 adaptors matches your battery pack










18-21V

BOSCH DECKER STANLEY

MAKITA

MILKWAUKEE DEWALT

2) To change the adaptor, simply undo the screw and remove the adaptor.

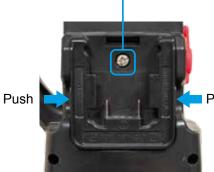

Push

3) Push here on both sides and pull off the adaptor.

4) Replace with the correct adaptor and re-screw back onto the lamp.



5) Slide the battery cartridge into adaptors making sure the battery pack is fully seated.

Operation:



There are two independent power switches, to control each light head.

Power / Light Mode Switch

1: On - High power



2: On - Medium power



3: On - Low power



4: Power off





NightSearcher Limited Unit 4 Applied House, Fitzherbert Spur, Farlington, Portsmouth, Hampshire, PO6 1TT, UK

T: +44 (0)23 9238 9774 E: sales@nightsearcher.co.uk To view and download the full manual in multiple languages please go to https://nightsearcher.co.uk/en/user-manuals.html Or scan this QR code.













If at any time, you need to dispose of this product or parts of this product: please note that waste electrical products should not be disposed of with ordinary household waste. Recycle where facilities exist. Check with your local authority for recycling advice. Alternatively, NightSearcher is happy to take receipt of this product at end-of-life and will recycle it on your behalf.

All NightSearcher products have a 3-year standard warranty on all manufacturing defect from the date of purchase. Please visit www.nightsearcher.co.uk for extended warranty information, proof of purchase is required.

Product weight	Light: 2.1kg, Tripod: 2.3kg
Product size	208x92x92mm
NS Part No.	NSTWINSTARC











